



# UB 002 relay - 2 Level load shedding Datasheet



### Description

The voltage monitoring relay UB 002 opens auxiliary loads circuits when battery voltage becomes too low and puts them back in service when battery voltage recovers. A time delay of 20 seconds engages before opening a load circuit and a time delay of 2 seconds before putting back in service a load.

The plug-in design offers secure locking feature for maximum ease of maintenance (no wires need to be disconnected or other hardware removed for relay inspection or replacement). The resistance to impact and vibration is conform to standards in force for Railway Transported Equipment.

Positive mechanical keying of relay to socket is built into relay and socket during manufacture and terminal identifications are clearly marked on identification plate that is permanently attached to the relay

The UB 002 relay is pluggable in the following sockets: EA 102 B, EA 102 B, EA 102 BF, EA 103 BF, EA 104 B, EA 104 BF, EA 105 BF, EA 112 BF.

### Application

The UB 002 relay is designed for voltage level sensing and used for example to monitor the battery load shedding.

# à.





### Features

- Load shedding relay 2 voltage levels
- 2 N/O solid state contacts
- Plug-in design with secure locking feature for maximum ease of maintenance
- -40 °C...+85 °C operating temperature

### Benefits


- Proven reliable
- Long life cycle
- Easy to maintain and replace
- Low life cycle cost
- No maintenance


### Railway compliancy

- NF F 62-002 Rolling stock -Instantaneous relays contacts and sockets
- NF F 16-101/102 Fire behaviour -Railway rolling stock
- EN 50155 Railway application -Electronic equipment used on rolling stock
- IEC 61373 Railway application shock and vibration tests



### Functional and connection diagrams

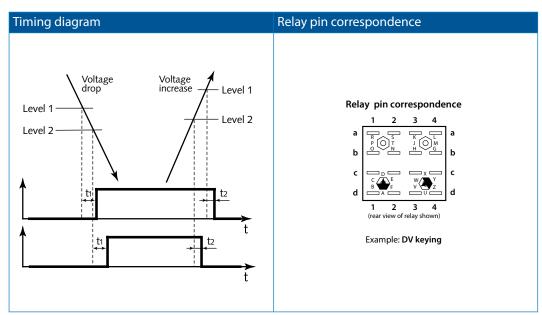

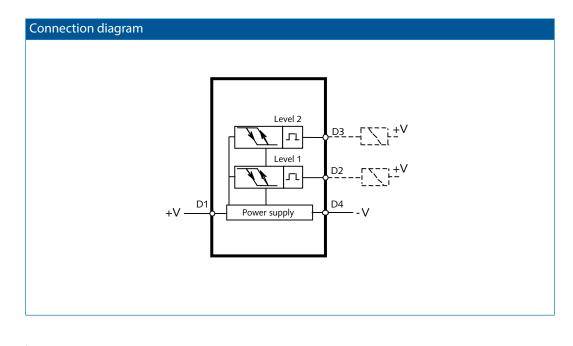







### Input data

Keying	Unom (VDC)	Uoperating (VDC)	Level 1 (drop/increase) VDC	Level 2 (drop/increase) VDC
TBD <sup>(1)</sup>	24	15 / 30	23 / 25	22 / 25
TBD <sup>(1)</sup>	36	25 / 48	TBD <sup>(1)</sup>	TBD <sup>(1)</sup>
TBD <sup>(1)</sup>	48	30 / 64	TBD (1)	TBD <sup>(1)</sup>
TBD <sup>(1)</sup>	72	46 / 96	65 / 70	63 / 68
TBD <sup>(1)</sup>	110	70 / 140	87 / 95	85 / 95

(1) to be defined

# **Electrical characteristics**

Operating voltage	24 VDC110 VDC	
Operating current	< 10 mA	
Output configuration	2 N/O solid state contacts	
Maximum load current	0.25 A	
Contact life	72 VDC, 0.25 A, L/R = 0 mA	10 <sup>6</sup> operations
	72 VDC, 0.25 A , L/R = 30 mA	10 <sup>6</sup> operations
Dielectric strength	1500 VAC, 1 min	

### Time delay characteristics

Time delay on voltage increase	020 s (t1) to be defined
Time delay on volage drop	020 s (t2) to be defined

### Accuracy repeatability

Voltage level tolerance	± 1 V







### Mechanical and environmental specifications

Operating temperature	-40 °C+85 °C , IP50 (relay on socket)
Vibrations 3 axis	2 g / 10150 Hz
Shocks	30 g / 11 ms
Operating position	Any attitude
Environment	NF F 20-600
Weight	150 g
Material	Polycarbonat (cover) / Polyester Melamine (base)
Fire and smoke	NF F 16-101/102




4





## Dimensions (mm)

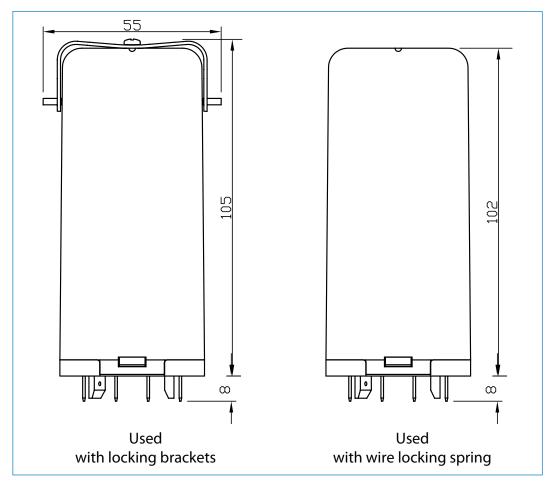







# **UB 002 relay** Mounting possiblities / sockets



#### Panel/flush mounting

EA 102 B	Locking bracket (905843), rear connection, double Faston 5 mm
EA 102 BF	Wire locking spring (926853), rear connection, single Faston 5 mm
EA 104 B	Locking bracket (905843), rear connection, single Faston 5 x 0.8 mm
EA 104 BF	Wire locking spring (926853), rear connection, single Faston 5 x 0.8mm
EA 112 BF	Wire locking spring (926853), rear connection, crimp contact

#### Surface/wall mounting

EA 103 BF*	Wire locking spring (926853), front connection, M3 screw 6.5 mm ring terminals
	(2,5 mm <sup>2</sup> )
EA 105 BF*	Wire locking spring (926853), front connection, single Faston 5 mm

\* Mounting possibility on 35 mm rail EN 50022 by adding suffix D to the part number (see socket datasheet)

Note: Keying of relay to socket can be specified by adding the keying letters in the part number. See all details in the related socket datasheet.




6





# **UB 002 relay** Spare parts

### Spare parts - order part numbers

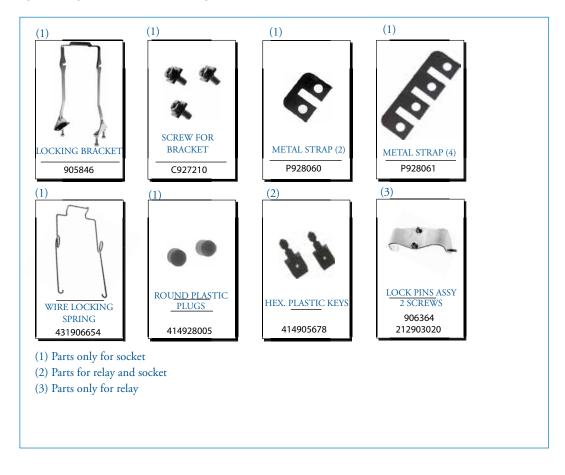









# UB 002 relay Instructions

#### Installation

Install socket and connect wiring correctly according identification to terminals. Plug relay into socket. Reverse installation into socket not possible due to mechanical blocking by snap-lock. Don't reverse polarity of coil connection. Relays can be mounted (tightly) next to each other and in any attitude. **Warning!** Never use silicon near by relays

#### Operation

Before operating always apply voltage to coil to check correct operation.

Long term storage may corrode the silver on the relay pins. Just by plugging the relay into the socket, the female bifurcated receivers will automatically clean the corrosion on the pins and guarantee a good connection. Do not use the relay in places with flammable gas as the arc generated from switching could ignite gasses.

#### Maintenance

Correct operation of relay can easily be checked as transparent cover gives good visibility on the moving contacts. When the relay doesn't seem to operate correct, please check presence of coil voltage. Use a multimeter. If LED is used, coil presence should be indicated. If coil voltage is present, but the relay doesn't work, a short circuit of suppression diode is possible (The coil connection was reversed). If relay doesn't work after inspection, please replace relay unit by a similar model. Send defective relay back to manufacturer. Normal wear and tear excluded.




8





# UB 002 relay Ordering scheme

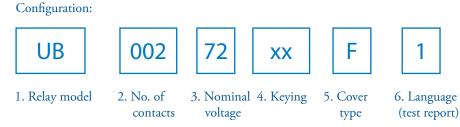

This example represents a UB 002 72 XX F 1.

**Description**: UB 002 relay, Unom: 72 VDC, keying XX, relay cover for wire locking spring, test report in English

### 1. Relay model



#### 2. Number of contacts

002 2 contacts (2 levels)

#### 3 & 4. Nominal voltage and keying

24 xx	24 VDC
36 xx	36 VDC
<b>48 xx</b>	48 VDC
72 xx	72 VDC
110 xx	110 VDC
xx = to be	e defined

#### 5. Relay cover type

-	Relay cover with lock pins
F	Relay cover forwire locking spring

#### 6. Language on test report

_	French
1	English
2	Spanish














DS-UB 002-V2.0 May 2013



### www.morssmitt.com

(c) Copyright 2013



Mors Smitt France SAS Tour Rosny 2, Avenue du Général de Gaulle, F - 93118 Rosny-sous-Bois Cedex, FRANCE T +33 (0)1 4812 1440, F +33 (0)1 4855 9001 E sales@msrelais.com

Mors Smitt Asia Ltd. # 807, Billion Trade Centre, 31 Hung To Road Kwun Tong, Kowloon, HONG KONG SAR T +852 2343 5555, F +852 2343 6555 E info@morssmitt.hk

Mors Smitt B.V. Vrieslantlaan 6, 3526 AA Utrecht, NETHERLANDS T +31 (0)30 288 1311, F +31 (0)30 289 8816 E sales@nieaf-smitt.nl

Mors Smitt Technologies Inc. 420 Sackett Point Road North Haven, CT 06473, USA T +1 (203) 287 8858, F +1 (888) 287 8852 E mstechnologies@msrelais.com

Mors Smitt UK Ltd. Doulton Road, Cradley Heath West Midlands, B64 5QB, UK T +44 (0)1384 567 755, F +44 (0)1384 567 710 E info@morssmitt.co.uk