

# /// Plug-in railway relay with 4 C/O contacts

Rugged plug-in relays for extreme reliability, within long endurance applications and harsh environments

# FDA4-U200

Flashing relay
Part of D-platform



### **Features**

- · Flashing relay (symmetrical)
- Duty cycle: 50 %
- Compact plug-in design
- 4 C/O contacts
- Fixed pulse rate
- Pulse times between 0.2 s...60 min
- Also available with adjustable pulse rate (with knob)
- · Magnetic arc blow-out
- Two LEDs for status indication
- Flat, square and silver plated relay pins for excellent socket connection
- Integrated snap lock
- · Optional positive mechanical keying relay to socket

### Description

Plug-in electronic railway pulsing relay with four changeover contacts. When the relay is activated the coil starts with an interval. The pulse time and interval time are equal. The relay is supplied with a fixed pulsing frequency. The relay can also be supplied with an adjustable pulsing frequency (relay with knob).

The relay is equipped with two LEDs which indicate the presence of power supply and the energizing of the coil. Also standard equipped with magnetic arc blow-out for high breaking capacity and long contact life.


The construction of the relay and choice of materials makes the FDA4-U200 relay suitable to withstand low and high temperatures, shock & vibrating and dry to humid environments. No external retaining clip needed as integrated 'snap-lock' will hold relay into socket under all circumstances and mounting directions.

Compact design, choice of many options and a wide range of sockets makes the FDA4-U200 relay an easy and flexible solution to use.


### Application

These relay series are designed for demanding train borne applications. The FDA4-U200 is used in applications where a pulse frequency in output is necessary after activating the relay.

# Connection diagram



# Timing diagram

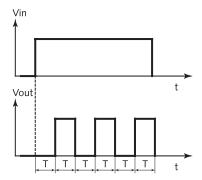

### Example:

Pulse frequency: 60 imp/min

T = 0.5 s

### Railway compliancy

EN 50155 EN 50121 IEC 60571 EN 45545-2 IEC 60077 NF F16-101/102 IEC 60947 NF F 62-002

www.morssmitt.com

IEC 61373




### **Options**

- Low temperature (-40 °C), max. contact current 8 A
- · Gold plated contacts
- Extra dust protection
- AgSnO<sub>2</sub> contacts, high resistant to welding
- No magnetic arc blow-out
- Double zener diode over coil
- Keying

Remark: Not all combinations possible

### Dimensions (mm)

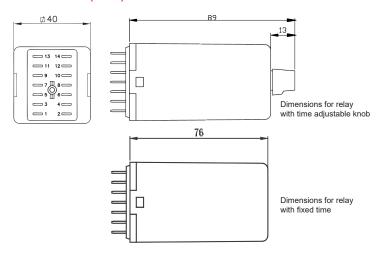

Sockets		Mounting				
		Surface / Wall	35 mm rail	Panel / Flush	PCB	
٦	Screw	V23	V23	-	-	
ctio	Screw - wide terminals	V22 BR	V23 BR	-	-	
conne	Spring clamp	V29	V29	V33	-	
	Faston	-	-	V31	-	
inal	Crimp	-	-	V26	-	
E	Solder tag	-	-	V3	-	
10	PCB	-	-	-	V32	

For more information see the respective datasheets

For more detailed technical specifications, drawings and ordering information, go to the product page on www.morssmitt.com

# √ Over 10 million Mors Smitt relays in use in rail transport applications worldwide!

Mors Smitt Asia Ltd.
Unit B & C, 25/F., Casey Aberdeen House
38 Heung Yip Road, Wong Chuk Hang
Hong Kong
Tel: +852 2343 555
sales.msa@wabtec.com

Wabtec Netherlands B.V. Vrieslantlaan 6, 3526 AA, Utrecht, Netherlands Tel: +31 (0)30 288 1311 sales.msbv@wabtec.com Mors Smitt France SAS 2 Rue de la Mandinière 72300 Sablé-sur-Sarthe, France Tel: +33 (0) 243 92 82 00 sales.msf@wabtec.com

Mors Smitt Technologies Ltd. 1010 Johnson Drive, Buffalo Grove, IL 60089-6918, USA Tel: +1 847 777 6497 salesmst@wabtec.com Mors Smitt UK Ltd. Graycar Business Park, Burton on Trent, DE13 8EN, UK Tel: +44 (0)1283 357 263 sales.msuk@wabtec.com

RMS Mors Smitt 6 Anzed Court, Mulgrave, VIC 3170, Australia Tel: +61 (0)3 8544 1200 sales.rms@wabtec.com

(c) Copyright 2019

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Mors Smitt. This also applies to accompanying drawings and diagrams. Due to a policy of continuous development Mors Smitt reserves the right to alter the equipment specification and description outlined in this datasheet without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract. Mors Smitt does not warrant that any of the information contained herein is complete, accurate, free from potential errors, or fit for any particular purpose. Mors Smitt does not accept any responsibility arising from any party's use of the information in this document.



### **Technical specifications**

Flashing relay FDA4-U200

### Pulse characteristics

Pulse function		Flashing (symmetrical); duty cycle 50 %
Frequency	Fixed pulse (set value in factory)(xx)	Selectable between 300 imp/min and 1/60 imp/min
	Adustable pulse	On request, ratio min:max = 1:3
Accuracy	Set value in factory	< 5 %
	Voltage variation	± 0.05 % / % Unom
	Repeatability	± 0.5 %
	Temperature variation	± 0.02 % / K
Recovery time		± 0.1 s
Release time		< 30 ms
Maximum permissable rippl	le	50 %

#### **Example**

Pulse frequency: 20 - 60 imp/min

Pulse frequency set on 30 imp/min: pulse cycle time is 2.0 s.

The ambient temperature is 40 degrees Celsius which is 20 degrees different compared to the standard 20 degrees Celsius. This results in 0.4 % pulse cycle time variation. The applied voltage is 30 % lower than the nominal voltage. This results in 1.5 % extra time variation. The total time variation is then 0.5 % (repeatability) + 0.4 % (time variation) + 1.5 % (voltage variation) = 2.4 %. In this case the pulse cycle time will be between 1.95 s and 2.05 s.

### Coil characteristics

Operating voltage range		0.71.25 Unom
Nominal power consumption Durin		< 0.875 W (220 V) < 0.375 W (110 V) Lower voltage = lower power
Afte	er time delay	< 3.6 W (220 V) < 3 W (110 V) Lower voltage = lower power

Туре	Unom (VDC)	Umin (VDC)	Umax (VDC)
FDA4-U201-xx	24	16.8	30
FDA4-U202-xx	48	33.6	60
FDA4-U203-xx	72	50.4	90
FDA4-U204-xx	110	77.0	138
FDA4-U205-xx	96	67.2	120
FDA4-U207-xx	36	25.2	45

Other types on request

#### Remarks:

- Umin is the must-operate voltage at which the relay has picked up in all circumstances (worst-case situation), in practice the relay picks up at a lower voltage Udrop-out is the must-release voltage at which the relay has dropped-out in all circumstances (worst-case situation), in practice the relay drops out at a higher voltage (Urelease) To reset the time function, the voltage must drop below Udrop-out
- Always select the nominal voltage as close as possible to the actual voltage in the application

Remark: In June 2019 the coil tape color is changed to yellow. This change has no effect on any of the relay specifications or technical performance.



### Contact characteristics

Amount and type of contacts	4 C/O
Maximum make current	16 A
Peak inrush current NF F 62-002	200 A (withstand > 10 x 200 A @ 10 ms, 1 min)
Maximum continuous current	10 A
Maximum switching voltage	250 VDC, 440 VAC
Minimum switching voltage	12 V
Minimum switching current	10 mA
Maximum breaking capacity (> 50.000 operations)	72 VDC, 5 A (L/R ≤ 40 ms) 110 VDC, 10 A (resistive load) 110 VDC, 0.5 A (L/R ≤ 40 ms)
Contact resistance	15 m $\Omega$ (initial)
Material	Ag standard (optional AgSnO <sub>2</sub> , Au on Ag)
Contact gap	0.7 mm
Contact force	> 200 mN

### **Electrical characteristics**

Dielectric strength	Pole-pole	4 kV, 50 Hz, 1 min
	Cont-coil	2.kV, 50 Hz, 1 min
	Open contacts	2.5 kV; 50 Hz; 1 min
Pulse withstanding	IEC 60255-5	5 kV (1.2/50 μs)

### Mechanical characteristics

Mechanical life	30 x 10 <sup>6</sup> operations
	Mechanical: 3600 ops/h Electrical: 1200 ops/h
Weight	100 g (without options)

# **Environmental characteristics**

Environmental	EN 50125-1
Vibration	IEC 61373, Category I, Class B, Body mounted
Shock	IEC 61373, Category I, Class B, Body mounted
Operating temperature	-25 °C+85 °C (optional: -40 °C)
Humidity	95% (condensation is permitted temporarily)
Maximum altitude	2000 meter. Higher altitudes are possible but have consequences mentioned in IEC 60664 (for example 5000 meter with bigger clearance distance)
Salt mist	IEC 60068-2-11, class ST4
Damp heat	IEC 60068-2-30, Test method Db variant 1
Protection	IEC 60529, IP40 (relay on socket) (with option K: IP50)
Fire & smoke	NF F 16-101, NF F 16-102, EN 45545-2: HL3 for requirements R22, R23, R26
Insulation materials	Cover: polycarbonate Base: polyester



# Railway compliancy

EN 50155	Railway applications - Rolling stock - Electronic equipment
IEC 60571	Railway applications - Electronic equipment used on rolling stock
IEC 60077 Railway applications - Electric equipment for rolling stock	
IEC 60947	Low-voltage switchgear and controlgear
IEC 61373	Railway applications - Rolling stock equipment - Shock and vibration tests
EN 50121	Railway applications - Electromagnetic compatibility
NF F16-101/102	Railway rolling stock - Fire behavior
EN 45545-2	Railway applications - Fire protection on railway vehicles Part 2: Requirements for fire behavior of materials and components
NF F 62-002	Railway rolling stock - On-off contact relays and fixed connections


# **Options**

Code	Description	Remark	Cannot be combined with:		
Standard opt	ions:				
С	Low temperature (-40 °C)	Icontact < 8 A			
E*	Au; Gold plated contacts (10 μm)	Yellow tape around relay for identification	M		
К	Extra dust protection	IP50 Cat 2 for the relays mounted in a Mors Smitt socket. Application PD1/PD2 and contact load > 0.5 A.			
N	No magnetic arc blow-out				
Q	Double zener diode over coil	Max. allowed peak voltage180 V, higer voltage will damage the diode			
Keying	Coil coding relay and socket				
Special optio	ns:				
M	AgSnO <sub>2</sub> ; "non-weldable" contacts	Icontact > 100 mA	E		
* Gold plated	contacts characteristics				
Material		Ag, 10 μm gold plated			
Maximum switching voltage		60 V (higher voltages may be possible, contact Mors Smitt for more information)			
Maximum switching current		400 mA (at higher rate gold will evaporate, then the standard silver contact rating of minimum 10 mA and 12 V is valid)			
Minimum switching voltage		5 V			
Minimum swi	tching current	1 mA	1 mA		

Remark: For application support or technical product support, contact your local Mors Smitt sales office (see contact details on last page).



### Electrical life expectancy

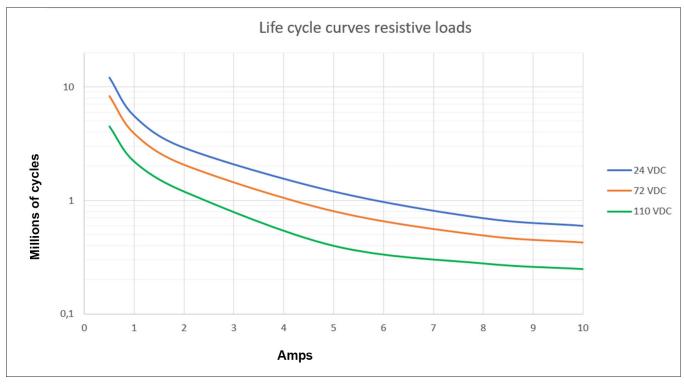

By connecting 2 contacts in series the DC current breaking capacity is increased by 50 %. Electrical lifetime is tested under laboratory conditions with switching frequency 0.33 Hz.

Note: The actual electrical lifetime in the application is affected by the switching frequency, type of contact (N/O or N/C), environmental conditions, etc.

### Expected electrical lifetime inductive loads:

Inductance	Voltage	% of resistive load	Remark
15 ms	24 VDC	30 %	
15 ms	72 VDC	25 %	Tested up to 8 A
15 ms	110 VDC	20 %	Tested up to 0.5 A
40 ms	24 VDC	10 %	
40 ms	72 VDC	4 %	Tested up to 5 A
40 ms	110 VDC	2 %	Tested up to 0.5 A

For other contact loads: contact Mors Smitt.



# Mounting possibilities/sockets



### Surface/wall mounting

338000302	V22BR	Screw socket, wall mount, front connection (9 mm terminals)
338000580	V23	Screw socket, wall mount, front connection (7.5 mm terminals)
338000610	V29	Spring clamp socket, wall mount, front dual connection (2.5 mm²)

#### Rail mounting

338000580	V23	Screw socket, rail mount, front connection (7.5 mm terminals)
338000402	V23BR	Screw socket, rail mount, front connection (9 mm terminals)
338000610	V29	Spring clamp socket, rail mount, front dual connection (2.5 mm²)

### Panel/flush mounting

338100100	V3 Solder tag socket, panel mount, rear connection	
328400100	V26 Crimp contact socket, panel mount, rear connection, A260 crimp	
338000560	V31	Faston connection socket, rear dual connection (4.8 x 0.8 mm)
338000570	000570 V33 Spring clamp socket, flush mount, rear dual connection (2.5 mm²)	

#### PCB mounting

1 Ob mounting		
338000561	V32	PCB soldering socket

No external retaining clip needed as the 'snap-lock' will hold the relay into the socket under all circumstances and mounting directions (according shock & vibration requirements IEC 61373, Category I, Class B, Body mounted). If regulations require external retaining clips, these are available as well.

For more details see datasheets of the sockets on www.morssmitt.com



### Mechanical keying relay and socket (optional)






#### Function:

- To prevent wrong installation
- To prevent damage to equipment
- To prevent unsafe situations

Using keyed relays and sockets prevents a relay is inserted in a wrong socket. For example it prevents that a 24 VDC relay is put in a 110 VDC circuit. Positive discrimination is possible per different function, coil voltage, timing, monitoring, safety and non-safety.

The D relay socket keying option gives 8 x 8 = 64 possibilities. Upon ordering the customer simply indicates the need for the optional keying. Mors Smitt will assign a code to the relay and fix the pins into the relay. The sockets are supplied with loose key receptacles. Inserting the keys into the socket is very simple and self explaining.

Remark: Sockets and relay shown are examples.

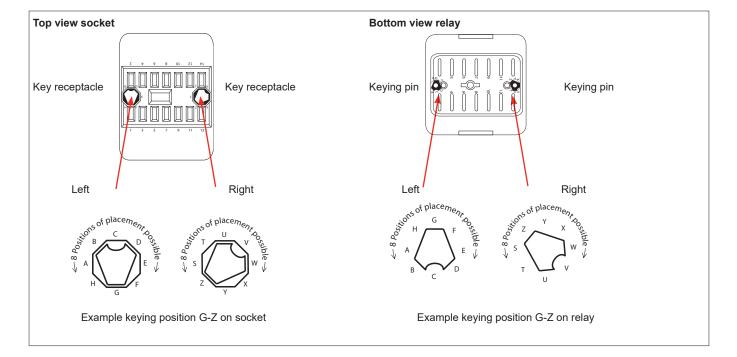



### Important for relay selection and operation

Make sure the relay is suitable for the application. For critical applications (for example: green loop applications) relays should be checked on correct working during periodic inspection.

#### Recommendations for long time contact reliability

For relays to enable failure free performance over a very long operational time, it is important to create the right circumstances. In any relay, contact usage and atmospheric conditions influence the contact surface. To counter this effect it is common practice to use a safety factor of > 2 to ensure long time contact reliability.

Therefore for long time contact reliability we recommend:

- Silver contacts: a minimum contact current of 20 mA per contact
- Gold contacts: a minimum contact current of 10 mA per contact
- Double Make Double Break contacts: a minimum contact current of 40 mA per contact
- When low currents are switched and not frequently, e.g. 10 mA once a day, it is advised next to gold plated contacts to put similar contacts within the same relay in parallel
- With higher load switching, e.g. 110 VDC and > 1 A, put relay contacts in series
- Rule of thumb: any relay works best with switching currents > 20 mA in DC environment when frequently switched. When not switched frequently a higher switching current like 50 mA is better for a long reliable operational time
- · Check relays regularly, for example with the Mors Smitt Portable Relay Tester and visually through the transparent cover


### Instructions for use

#### Installation


Before installation or working on the relay: disconnect the power supply first (no hot swapping)! Install socket and connect wiring according to the terminal identification. Plug relay into the socket ensuring there is no gap between the bottom of relay and the socket. Reverse installation into the socket is not possible due to the mechanical blocking snap-lock feature. Check to ensure that the coil connection polarity is not reversed. Relays can be mounted tightly together to save space. When rail mounting is used, always mount the socket in the direction of the UP arrow, to have proper fixation of the socket on the rail.

#### Warning!

- Never use silicon in the proximity of the relays
- · Do not use the relay in the presense of flammable gas as the arc generated from switching could cause ignition
- · To remove relays from the socket, employ up and down lever movements. Sideway movement may cause damage to the coil wires







Relays should never be swapped to other circuit positions when taken out of its socket for inspection or fault finding, always place it back
into the original position to prevent contact resistance problems. Contact resistance problems can be created when swapping relays
between different circuit loads due the contact wear/condition having changed during its operational life.

### Operation

After installation always apply the rated voltage to the coil to check correct operation. Long term storage may corrode the silver on the relay pins. When plugging the relay into the socket, the female bifurcated or trifurcated receivers will automatically cut through the corrosion on the pins and guarantee a reliable connection.

Before actual use of relays, it is advised to switch the load several times with the contacts. The contacts will both be electrically and mechanically cleaned due to the positive wiping action. Sometimes a contact can build up increased contact resistance ( $\leq$  15 m $\Omega$  when new). When using silver contacts one can clean the contact by switching a contact load a few times using >24 VDC & ~ 2A. Increased contact resistance is not always problematic, as it depends on circuit conditions. In general a contact resistance of 1  $\Omega$  is no problem, consult Mors Smitt for more information.

Condensation in the relay is possible when the coil is energised (warm) and the outside, environmental temperature is cold. This is a normal phenomenon and will not affect the function of the relay. Materials in the relay have no hygroscopic properties.



### Inspection / maintenance

Correct operation of the relay can easily be checked as the transparent cover provides good visibility of the moving contacts. If the relay does not seem to operate correctly, check for presence of the appropriate coil voltage and polarity using a suitable multimeter. If a LED is fitted, it indicates voltage presence to the coil. If coil voltage is present, but the relay does not operate, a short circuit of the suppression diode is possible (This may have been reversed due to the coil connection).

Relays can easily be tested with the Mors Smitt Relay Tester. More information on: www.morssmitt.com.

If the relay doesn't work after inspection, replace the relay unit with a similar model. Do not attempt to open the relay cover or try to repair. Contacts are calibrated and in balance, touching can affect proper operation. Also resoldering may affect correct operation. Since 2009 relays have tamper proof seals fitted and once broken, warranty is void.

Most relay defects are caused by installation faults such as overvoltage, spikes/transients, high/short current far exceeding the relay specifications. When returning the relays for investigation, please provide all information on the RMA form. Send defective relays back to the manufacturer for repair or replacement. Normal wear and tear or external causes are excluded from warranty.

RMA procedure see www.morssmitt.com



# Ordering scheme

FDA4-U -			
Coil voltages 201		24 VDC	
207		36 VDC	
202		48 VDC	
203		72 VDC	
205		96 VDC	Cannot be
204		110 VDC	combined with
Options	С	Low temperature (-40 °C) - Max contact current 8 A	
(add as many options as	E	Gold plated contacts	M
needed)	K	Extra dust protection, IP50	
	N	No magnetic arc blow-out	
	Q	Double zener diode	
Special options			
(minimum order quantity: 20)	M	AgSnO <sub>2</sub> contacts, highly resistant to welding	E
Pulse frequency	Fixed	Selectable between 300 imp/min and 1/60 imp/min	
	Adjustable	On request	

Examples:

### FDA4-U204-CE 100 imp/min

Description: FDA4-U204 relay, Unom 110 VDC, low temperature (-40 °C), gold plated contacts, pulse frequency: 100 imp/min





### • Over 10 million Mors Smitt relays in use in rail transport applications worldwide!

Mors Smitt Asia Ltd. Unit B & C, 25/F., Casey Aberdeen House 38 Henug Yip Road, Wong Chuk Hang **Hong Kong** Tel: +852 2343 555 sales.msa@wabtec.com

Wabtec Netherlands B.V. Vrieslantlaan 6, 3526 AA, Utrecht, Netherlands Tel: +31 (0)30 288 1311 sales.msbv@wabtec.com

Mors Smitt France SAS 2 Rue de la Mandinière 72300 Sablé-sur-Sarthe, France Tel: +33 (0) 243 92 82 00 sales.msf@wabtec.com

Mors Smitt Technologies Ltd. 1010 Johnson Drive, Buffalo Grove, IL 60089-6918, USA Tel: +1 847 777 6497 salesmst@wabtec.com

Mors Smitt UK Ltd. Graycar Business Park, Burton on Trent, DE13 8EN, UK Tel: +44 (0)1283 357 263 sales.msuk@wabtec.com

**RMS Mors Smitt** 6 Anzed Court, Mulgrave, VIC 3170, Australia Tel: +61 (0)3 8544 1200 sales.rms@wabtec.com

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Mors Smitt. This also applies to accompanying drawings and diagrams. Due to a policy of continuous development Mors Smitt reserves the right to alter the equipment specification and description outlined in this datasheet without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract. Mors Smitt does not warrant that any of the information contained herein is complete, accurate, free from potential errors, or fit for any particular purpose. Mors Smitt does not accept any responsibility arising from any party's use of the information in this document.