

KCD-U200 relay - Latching , 2 pole

Datasheet



Description

Plug-in bistable railway relay with two change-over contacts. The contacts remain in the last powered position, the position is clearly visible, optional shown via a position indicator. Bistable by means of two coils and a mechanical rocker mechanism. The two separate coils are galvanically isolated. The contacts are weld-no-transfer contacts: they are mechanically forced in the same position.

The construction of the relay and choice of materials makes the KCD-U200 relay suitable to withstand low and high temperatures, shock & vibrating and dry to humid environments.

No external retaining clip needed as integrated 'snap-lock' will hold relay into socket under all circumstances and mounting directions.

Compact design, choice of many options and a wide range of sockets makes the KCD-U200 relay an easy and flexible solution to use.

Application

These relay series are designed for demanding rolling stock applications. The KCD-U200 is used in applications where two contacts are used in one relay and the contacts are set and reset with permanent power or impulses.

Features

- Latching (bistable) relay
- Compact plug-in design
- 2 C/O contacts
- 2 galvanic isolated coils
- Clear position indicator (optional)
- Weld no transfer contacts
- Flat, square and silver plated relay pins for excellent socket connection
- Wide range sockets
- Integrated snap lock
- Transparent cover
- Optional positive mechanical keying relay to socket
- Flexibility by many options

Benefits

- Proven reliable
- Long term availability
- Easy to maintain
- Low life cycle cost
- No maintenance


Railway compliancy

- EN 50155 Electronic equipment used on rolling stock for railway applications
- IEC 60571 Electronic equipment used on railway vehicles
- IEC 60077 Electrical equipment for rolling stock in railway applications
- IEC 60947 Low voltage switch gear and control gear
- IEC 61373 Rolling stock equipment - Shock and vibration test
- IEC 60947-5-4 Electromechanical components for control applications. This standard examines both coil and contact specifications in depth
- EN 50121 Electromagnetic compatibility for railway applications
- NF F 16-101/102, EN 45545-2 Fire behaviour - Railway rolling stock
- NF F 62-002 On-off contact relays and fixed connections





KCD-U200 relay

Technical specifications

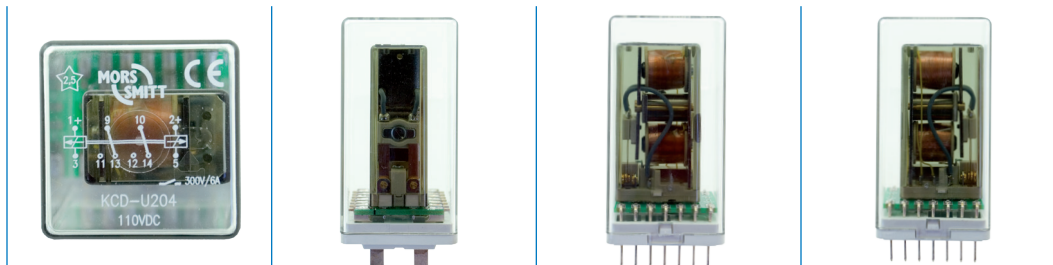

Functional and connection diagrams

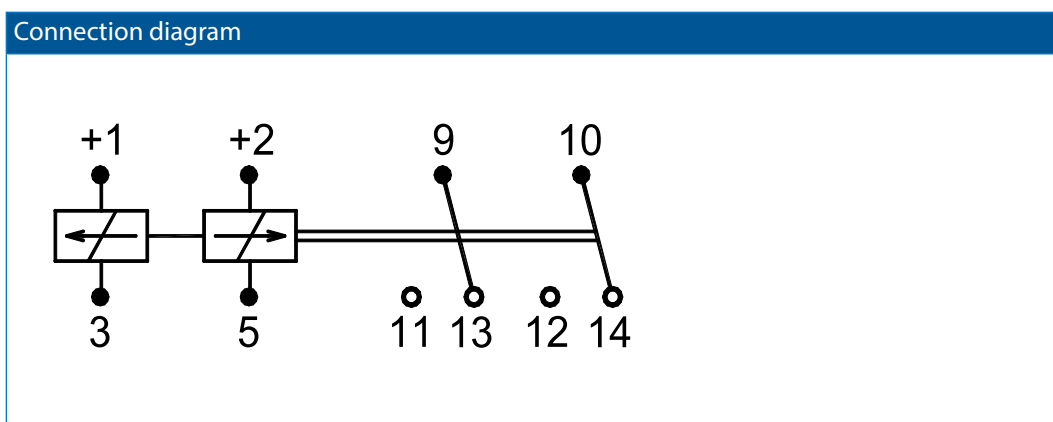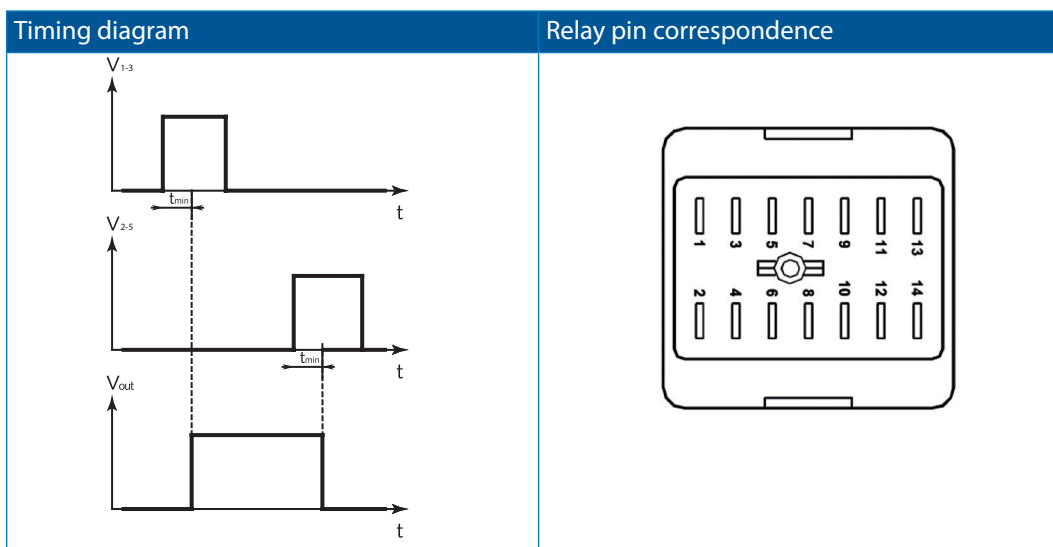

KCD-U200 relay

Technical specifications

Coil characteristics

Minimum impulse time	25 ms
Operating voltage range	0.7...1.25 U_{nom}
Nominal power consumption	- during interval time < 0.7 W - after pulse time < 1.2 W

Type	U_{nom} (VDC)	U_{min} (VDC)	U_{max} (VDC)	R_{coil} * (Ω)	I_{nom} (mA)
KCD-U201	24	16.8	30	500	48
KCD-U202	48	33.6	60	2060	23
KCD-U203	72	50.4	90	4900	15
KCD-U204	110	77.0	137.5	7800	11
KCD-U205	96	67.2	120	7800	12
KCD-U206	12	8.4	15	137	88
KCD-U207	36	25.2	45	1300	29

Other types on request

* The R_{coil} is measured at room temperature and has a tolerance of $\pm 10\%$

Remarks:

- U_{min} is the must-operate voltage at which the relay has picked up in all circumstances (worst-case situation), in practice the relay picks up at a lower voltage
- Always select the nominal voltage as close as possible to the actual voltage in the application

Contact characteristics

Amount and type of contacts	2 C/O
Maximum make current	15 A
Maximum continuous current	6 A (AC1 ; IEC 60947)
Maximum switching voltage	300 VDC (then max. current = 300 mA) 250 VAC (then max. current = 2.6 A)
Minimum switching voltage	12 V
Minimum switching current	10 mA
Maximum switching capacity	See graph page 6
Contact resistance	15 m Ω (initial)
Material	Ag standard (optional Au on Ag)
Contact gap	0.3 mm
Contact force	> 200 mN

Note : Contacts cannot have a different position (Forced contacts, Weld-no-transfer)



KCD-U200 relay

Technical specifications

Electrical characteristics

Dielectric strength	EN 50155
Pole-pole	IEC 60255-5 3 kV, 50 Hz, 1 min
Cont-coil	IEC 60077 3 kV, 50 Hz, 1 min
Insulation between open contacts	1 kV; 50 Hz; 1 min
Pulse withstanding	IEC 60255-5 5 kV (1.2 / 50 μ s)

Mechanical characteristics

Mechanical life	30 x 10 ⁶ operations
Maximum switching frequency	Mechanical: 3600 ops/h Electrical: 1200 ops/h
Weight	125 g

Environmental characteristics


Environmental	EN 50125-1 and IEC 60077-1
Vibration	IEC 61373, Category I, Class B, Body mounted
Shock	IEC 61373, Category I, Class B, Body mounted
Operating temperature	-25 °C...+70 °C (with option C : -40 °C)
Humidity	80 %
Salt mist	IEC 60068-2-52, Security level 3
Damp heat	IEC 60068-2-30, Test method Db variant 1
Protection	IEC 60529, IP40 (relay on socket) (with option K: IP50)
Fire & smoke	NF F 16-101, NF F16-102, EN 45545-2
Insulation materials	Cover: polycarbonate Base: polyester



KCD-U200 relay

Technical specifications

Dimensions (mm)

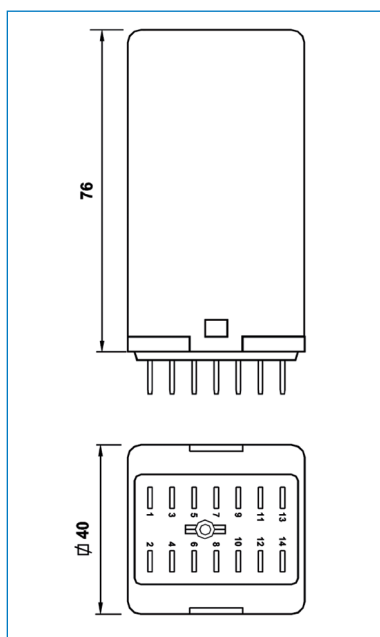

KCD-U200 relay

Technical specifications

Options

Code	Description	Remark	Cannot be combined with:
B	Magnetic arc blow out		
C	Low temperature (-40 °C)		
D	Back EMF protection diode		
E *	Au; Gold plated contacts (10 µm)		
K	Dust protection	IP50**	
Q	Double zener diode over coil	Max. allowed peak voltage 180 V, higher voltage will damage the diode.	
S	Position indicator	Coil 1-3: red, coil 2-5: green	
Y	Double make / double break contacts	1 C/O DM/DB	
Keying	Coil coding relay and socket		
Colour coding	Coloured cover for coil voltage coding		


* Gold plated contacts characteristics	
Material	Ag, 10 µm gold plated
Maximum switching voltage	60 V (higher voltages may be possible, contact Mors Smitt for more information)
Maximum switching current	400 mA (at higher rate gold will evaporate, then the standard silver contact rating of minimum 10 mA and 12 V is valid)
Minimum switching voltage	5 V
Minimum switching current	1 mA
** IP50 Cat2 for relays mounted in a Mors Smitt socket, application PD1/PD2 and contact load >0.5A.	



KCD-U200 relay

Technical specifications

Current breaking capacity

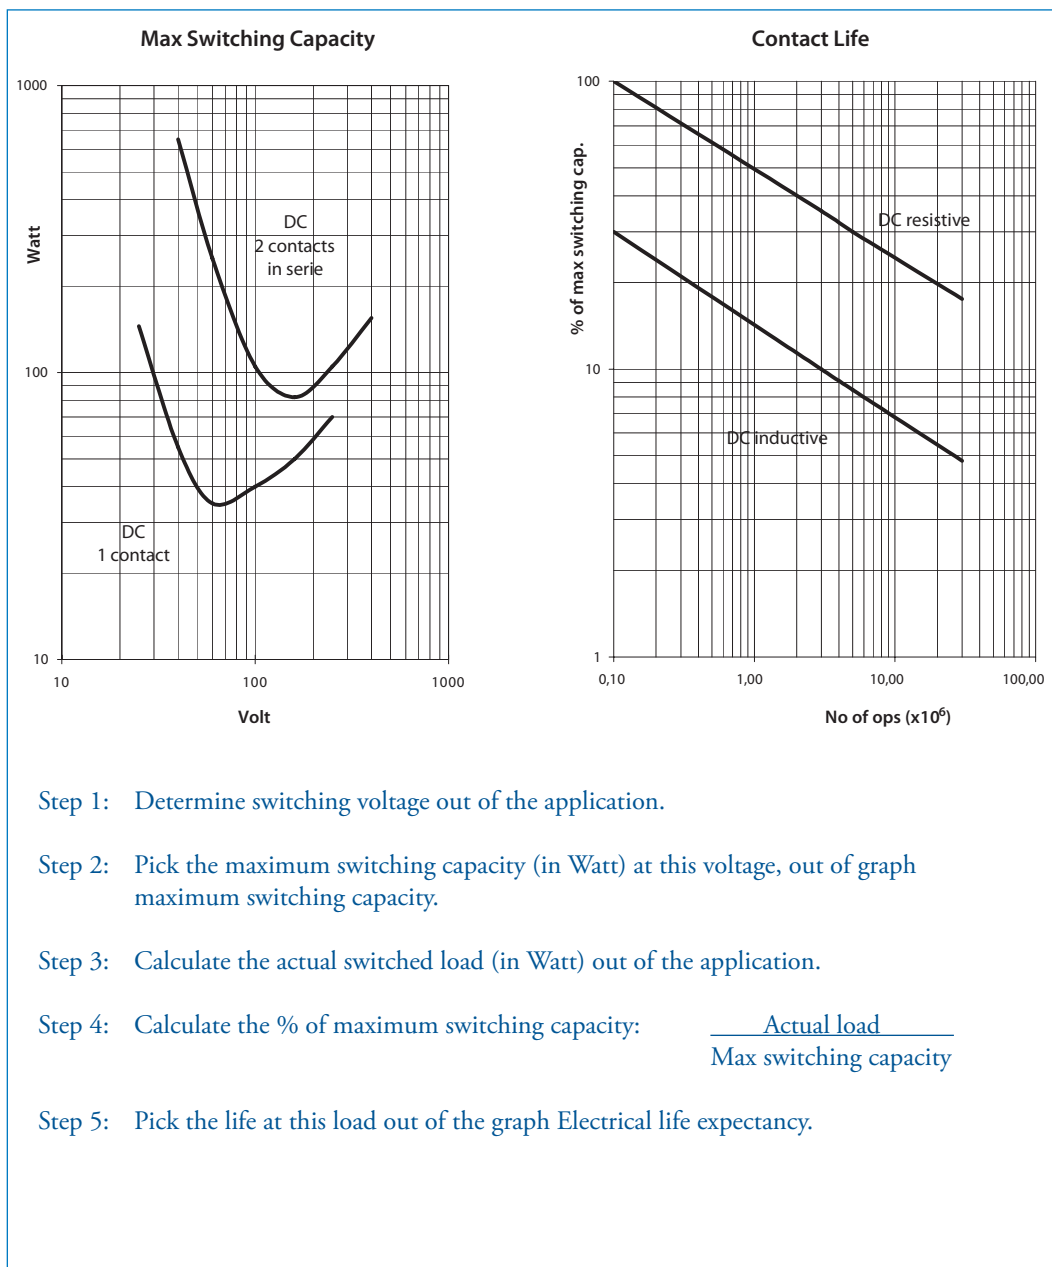

KCD-U200 relay Sockets

Mounting possibilities/sockets



Surface/wall mounting

338000302	V22BR	Screw socket, wall mount, front connection (9 mm terminals)
338000580	V23	Screw socket, wall mount, front connection (7.5 mm terminals)
338000610	V29	Spring clamp socket, wall mount, front dual connection (2.5 mm ²)

Rail mounting

338000580	V23	Screw socket, rail mount, front connection (7.5 mm terminals)
338000402	V23BR	Screw socket, rail mount, front connection (9 mm terminals)
338000610	V29	Spring clamp socket, rail mount, front dual connection (2.5 mm ²)

Panel/flush mounting

338100100	V3	Solder tag socket, panel mount, rear connection
328400100	V26	Crimp contact socket, panel mount, rear connection, A260 crimp contact
338000560	V31	Faston connection socket, rear dual connection (6.3 mm)
338000570	V33	Spring clamp socket, flush mount, rear dual connection (2.5 mm ²)

PCB mounting

338000561	V32	PCB soldering socket
-----------	-----	----------------------



For more details see datasheets of the sockets



KCD-U200 relay

Keying

Mechanical keying relay and socket (optional)

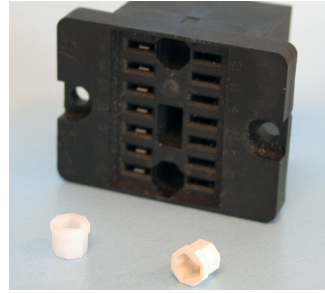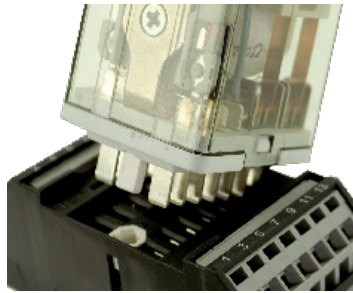


Function:

- To prevent wrong installation
- To prevent damage to equipment
- To prevent unsafe situations

Using keyed relays and sockets prevents a relay is inserted in a wrong socket. For example it prevents that a 24 VDC relay is put in a 110 VDC circuit. Positive discrimination is possible per different function, coil voltage, timing, monitoring, safety and non-safety.

The D relay socket keying option gives $8 \times 8 = 64$ possibilities. Upon ordering the customer simply indicates the need for the optional keying. Mors Smitt will assign a code to the relay and fix the pins into the relay. The sockets are supplied with loose key receptacles. Inserting the keys into the socket is very simple and self explaining.

Remark: Sockets and relay shown are only examples.

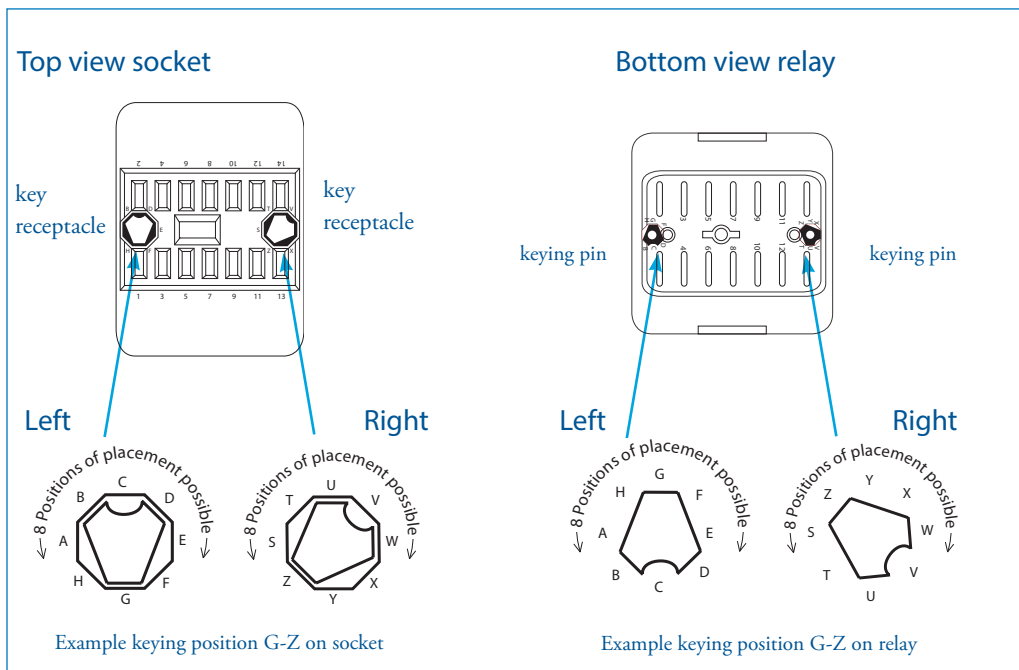

KCD-U200 relay

Instructions

Installation, operation & inspection


Installation

Before installation or working on the relay: disconnect the power supply first! Install socket and connect wiring according to the terminal identification. Plug relay into the socket ensuring there is no gap between the bottom of relay and the socket. Reverse installation into the socket is not possible due to the mechanical blocking snap-lock feature. Check to ensure that the coil connection polarity is not reversed. Relays can be mounted tightly together to save space.

When rail mounting is used, always mount the socket in the direction of the UP arrow, to have proper fixation of the socket on the rail.

Warning!

- Never use silicon in the proximity of the relays.
- Do not use the relay in the presence of flammable gas as the arc generated from switching could cause ignition.
- To remove relays from the socket, employ up and down lever movements. Sideway movement may cause damage to the coil wires.

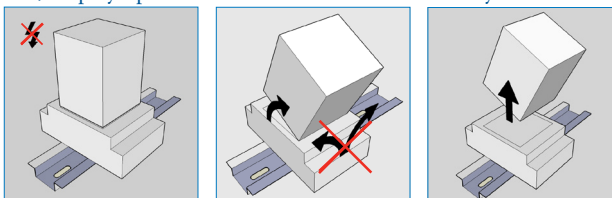

Operation

After installation always apply the rated voltage to the coil to check correct operation.

Long term storage may corrode the silver on the relay pins. When plugging the relay into the socket, the female bifurcated or trifurcated receivers will automatically cut through the corrosion on the pins and guarantee a reliable connection.

Before actual use of relays, it is advised to switch the load several times with the contacts. The contacts will both be electrically and mechanically cleaned due to the positive wiping action. Sometimes a contact can build up increased contact resistance ($\leq 15 \text{ m}\Omega$ when new). When using silver contacts one can clean the contact by switching a contact load a few times using $>24 \text{ VDC}$ & $\sim 2 \text{ A}$. Increased contact resistance is not always problematic, as it depends on circuit conditions. In general a contact resistance of 1Ω is no problem, consult Mors Smitt for more information.

Condensation in the relay is possible when the coil is energised (warm) and the outside, environmental temperature is cold. This is a normal phenomenon and will not affect the function of the relay. Materials in the relay have no hygroscopic properties.

Inspection

Correct operation of the relay can easily be checked as the transparent cover provides good visibility of the moving contacts. If the relay does not seem to operate correctly, check for presence of the appropriate coil voltage and polarity using a suitable multimeter. If a LED is fitted, it indicates voltage presence to the coil. If coil voltage is present, but the relay does not operate, a short circuit of the suppression diode is possible (This may be due to the coil connection having been reversed).

If the relay doesn't work after inspection, replace the relay unit with a similar model. Do not attempt to open the relay cover or try to repair. Contacts are calibrated and in balance, touching can affect proper operation.

Also re soldering may affect correct operation. Since 2009 relays have tamper proof seals fitted and once broken, warranty is void.

Most relay defects are caused by installation faults such as over voltage, spikes/transients, high/short current far exceeding the relay specifications. When returning the relays for investigation, please provide all information on the RMA form. Send defective relays back to the manufacturer for repair or replacement. Normal wear and tear or external causes are excluded from warranty.



KCD-U200 relay

Ordering scheme

Configuration:



1. Relay model

2. Coil voltage

3. Options

This example represents a **KCD-U201-DE**

Description: KCD-U200 series relay, U_{nom} : 24 VDC, back EMF protection diode, gold plated contacts

1. Relay model

KCD - U2

2. Coil voltage

01	24 VDC
02	48 VDC
03	72 VDC
04	110 VDC
05	96 VDC
06	12 VDC
07	36 VDC

3. Options


B	Magnetic arc blow out
C	Low temp. (-40 °C)
D	Back EMF protection diode
E	Gold plated contacts
K	Dust protection, IP50
Q	Double zener diode
S	Position indicator
Y	Double make / double break

Upon ordering indicate keying if necessary.





DS-KCD-U200-V1.4 October 2016

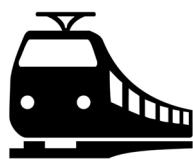

www.morssmitt.com



Mors Smitt France SAS

Tour Rosny 2, Avenue du Général de Gaulle,
F - 93118 Rosny-sous-Bois Cedex, FRANCE
T +33 (0)1 4812 1440, F +33 (0)1 4855 9001
E sales.msf@wabtec.com

Mors Smitt Asia Ltd.

29/F, Fun Towers, 35 Hung To Road
Kwun Tong, Kowloon, HONG KONG SAR
T +852 2343 5555, F +852 2343 6555
E sales.msa@wabtec.com

Mors Smitt B.V.

Vrieslantlaan 6, 3526 AA Utrecht,
NETHERLANDS
T +31 (0)30 288 1311, F +31 (0)30 289 8816
E sales.msby@wabtec.com

Mors Smitt Technologies Inc.

1010 Johnson Drive,
Buffalo Grove, IL 60089-6918, USA
T +1 847 777 6497, F +1 847 520 2222
E salesmst@wabtec.com

Mors Smitt UK Ltd.

Graycar Business Park, Barton under Needwood,
Burton on Trent, Staffordshire, DE13 8EN, UK
T +44 (0)1283 722650 F +44 (0)1283 722651
E sales.msuk@wabtec.com

RMS Mors Smitt

6 Anzed Court, Mulgrave,
VIC 3170, AUSTRALIA
T +61 (0)3 8544 1200 F +61 (0)3 8544 1201
E sales.msuk@wabtec.com

(c) Copyright 2016

All rights reserved. Nothing from this edition may be multiplied, or made public in any form or manner, either electronically, mechanically, by photocopying, recording, or in any manner, without prior written consent from Mors Smitt. This also applies to accompanying drawings and diagrams. Due to a policy of continuous development Mors Smitt reserves the right to alter the equipment specification and description outlined in this datasheet without prior notice and no part of this publication shall be deemed to be part of any contract for the equipment unless specifically referred to as an inclusion within such contract. Mors Smitt does not warrant that any of the information contained herein is complete, accurate, free from potential errors, or fit for any particular purpose. Mors Smitt does not accept any responsibility arising from any party's use of the information in this document.